

1.1 Table Position Sensor Tab

If the printing start position varies or there is mis-registration when printing on black fabric the Table Position Sensor Tab may be out of adjustment. To adjust the Table Position Sensor Tab, do the following:

1. Remove the Rear Enclosure by removing the seven 6-32 screws on the back panel. Slide the Rear Enclosure off. See Photo 2.2-1.



Photos 2.2-1

2. Turn on the printer main power switch on the rear of the unit.
3. Press the TABLE key on the Control Panel. This drives the Table assembly that is supported by the Slider to the rear stop position.
4. Observe the location of the Slider relative to the Rear Bumper. The Slider should just touch the Bumper. If there is a gap or the slider is pressed hard against the Rear Bumper, loosen the screws holding the sensor plate and adjust until the Slider just touches the Rear Bumper. Press the TABLE key to drive the Slider forward and back a number of times to insure that the Slider just touches the Bumper when it stops. See Photo 2.2-3

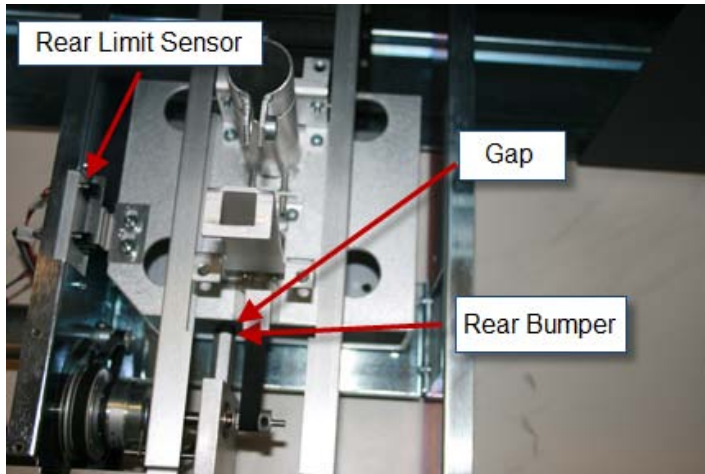


Photo 2.2-3

5. Reassemble the Tray and Table by reversing the above steps.