

3.2.5 Control Panel

CAUTION

The LCD is very static sensitive, use antistatic protective equipment.

1. Remove the four 6-32 button head cap screws that hold the Control Panel using a 5/64 hex Allen wrench. See Photo 3.2.5-1.

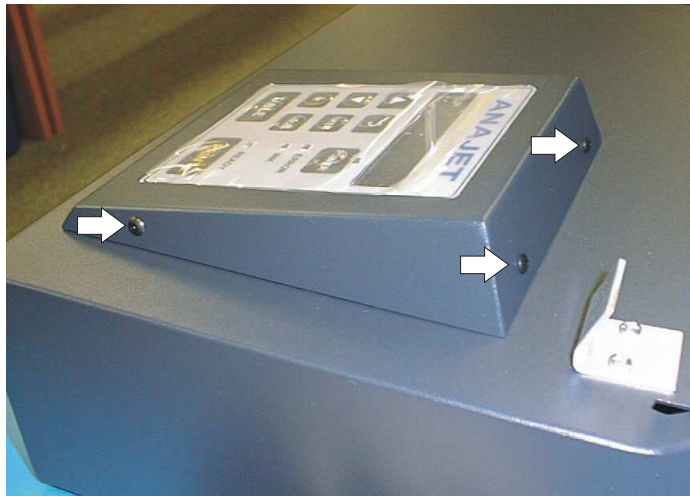


Photo 3.2.5-1

2. Remove the ribbon cable from the LCD.
3. Remove the 2 pin connector from the LCD backlight cable.
4. Remove the flat flex cable from the Control panel cable.
5. Reassemble the new Control Panel by reversing the above steps.
6. Adjust the backlight and character contrast if required, see 4.7.

3.2.6 LCD

1. Remove the control panel, see 8.2.3.
2. Remove the four 4-40 nuts retaining the LCD.
3. Reassemble the new LCD by reversing the above steps.